



HUAWEI

HDU88151079V100R001C00B934

Software Upgrade Guideline

Prepared by	U8815 (Team)	Date	2012-07-16
Reviewed by	U8815 (Team)	Date	2012-07-16
Approved by	U8815 (Team)	Date	2012-07-16



Huawei Technologies Co., Ltd.

All rights reserved



Contents

1	VERSION INTRODUCTION.....	3
1.1	THE FOLLOWING VERSIONS CAN BE UPGRADED.	3
1.2	UPGRADE PREREQUISITE.....	3
1.3	UPGRADE FILES	3
2	UPGRADE PREPARATION.....	3
2.1	CHECK CURRENT UPGRADE ENVIRONMENT	3
2.2	GET AND CHECK THE SOFTWARE PACKAGE.....	3
3	UPGRADE INTRODUCTION	3
4	UPGRADE OPERATIONS.....	4
4.1	NORMAL UPGRADE	4
4.2	FORCE UPGRADE.....	6
5	UPGRADE VALIDATE.....	7
5.1	CHECK THE VERSION	7
5.2	BASIC FUNCTION CHECK	7
6	NOTES.....	8
6.1	NOTES 1.....	8
6.2	NOTES 2.....	8



1 Version introduction

1.1 The following versions can be upgraded.

Versions can be upgraded
U8815V100R001C00B915
U8815V100R001C00B916
U8815V100R001C00B918
U8815V100R001C00B929
U8815V100R001C00B933

1.2 Upgrade prerequisite

The U8815 handset software should be updated with the MICRO SD card.

1.3 Upgrade files

	File Name	DATE	SIZE
Main package	dload\UPDATE.APP	2012-07-17	623,183 KB
Update tools	MICRO SD card		

2 Upgrade preparation

2.1 Check current upgrade environment

Make sure that the MICRO SD card is available and can be read and write.

2.2 Get and check the software package

There are one software package: Main package.

3 Upgrade introduction

There are two methods to upgrade: force upgrade and normal upgrade.

Force upgrade is often used when the handset can't boot up or can't enter the idle

 


 
screen. Normal upgrade needs to start the handset and enter the Setting module.

4 Upgrade operations


4.1 Normal upgrade

- Step 1. A MICRO SD card of 1GB or more should be available. The MICRO SD card made by Sandisk, Kingstone, or Kingmax is recommended.
- Step 2. Format the MICRO SD card (This operation is optional).
- Step 3. Copy the Main package file (UPDATE.APP) to dload folder.
- Step 4. Copy the entire dload folder (with UPDATE.APP in it) to the root directory of the MICRO SD card.
- Step 5. Insert the MICRO SD card into the handset and power on. After entering the home screen, press menu key to choose System settings->Storage->Software Upgrade->SD card Upgrade->Confirm->Upgrade to start the upgrade. Reference to the following pictures

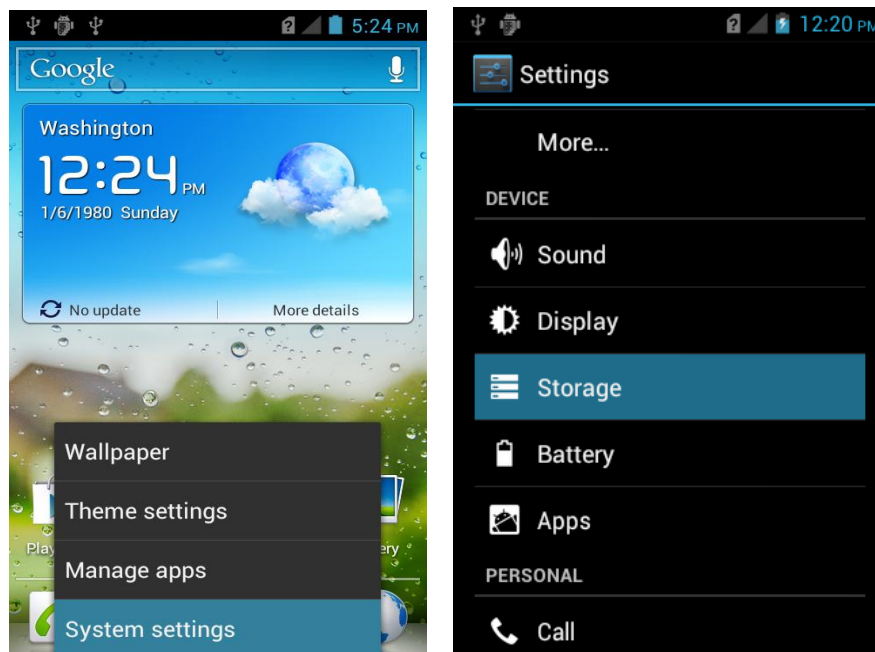

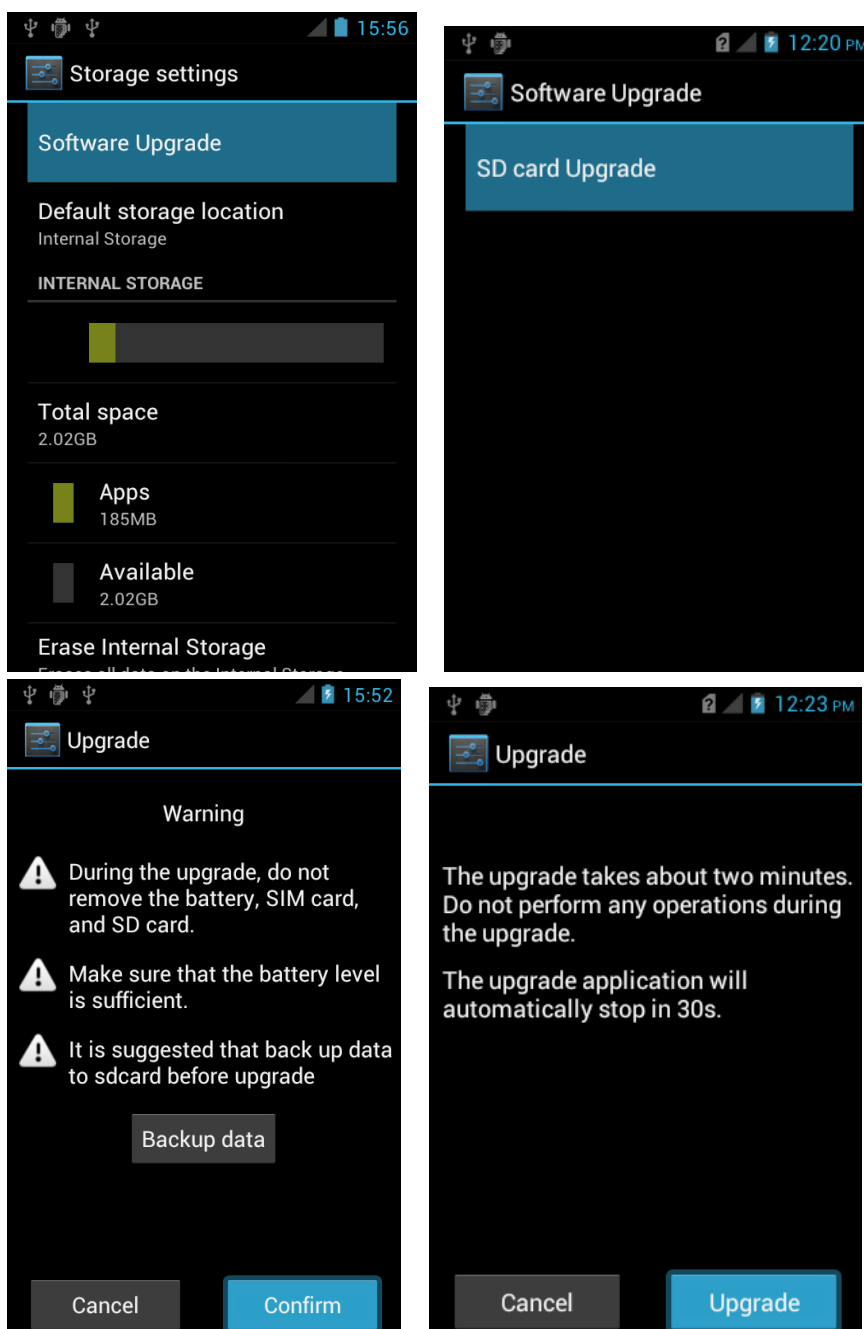


 Step 6. When the progress bar stop, the phone will restart, if not, you need to remove the battery manually.

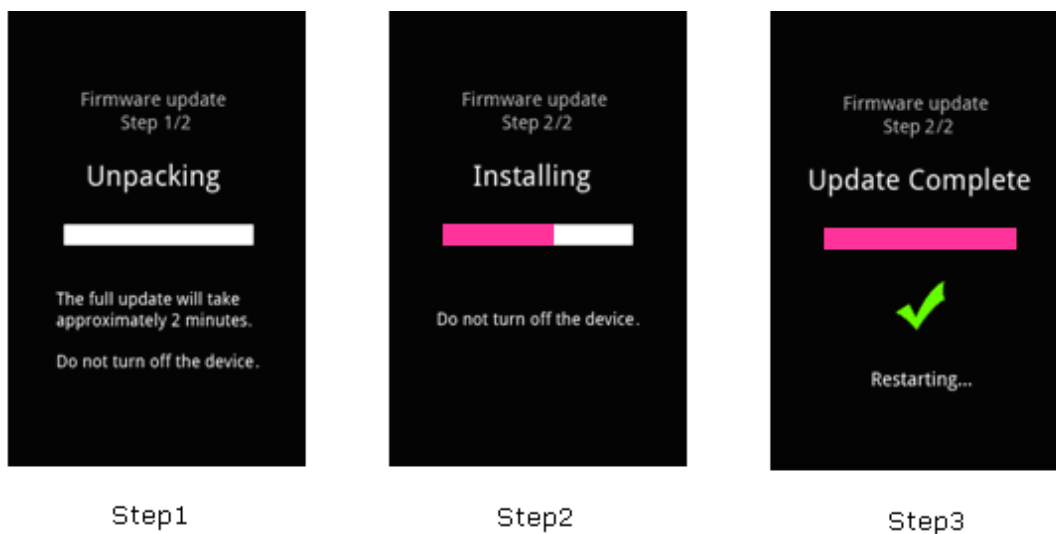

4.2 Force upgrade

 - Step 1. A MICRO SD card of 1GB or more should be available. The MICRO SD card made by Sandisk, Kingstone, or Kingmax is recommended.
- Step 2. Format the MICRO SD card (This operation is optional).
- Step 3. Copy the Main package file (UPDATE.APP) to dload folder.
- Step 4. Copy the entire dload folder (with UPDATE.APP in it) to the root directory of the MICRO SD card.
- Step 5. Make sure your handset is power off. Insert the MICRO SD card into the handset. Press the **VOLUME UP** and **VOLUME DOWN** key, and then press the **POWER** key to power on the phone and enter the Software Upgrade Mode.

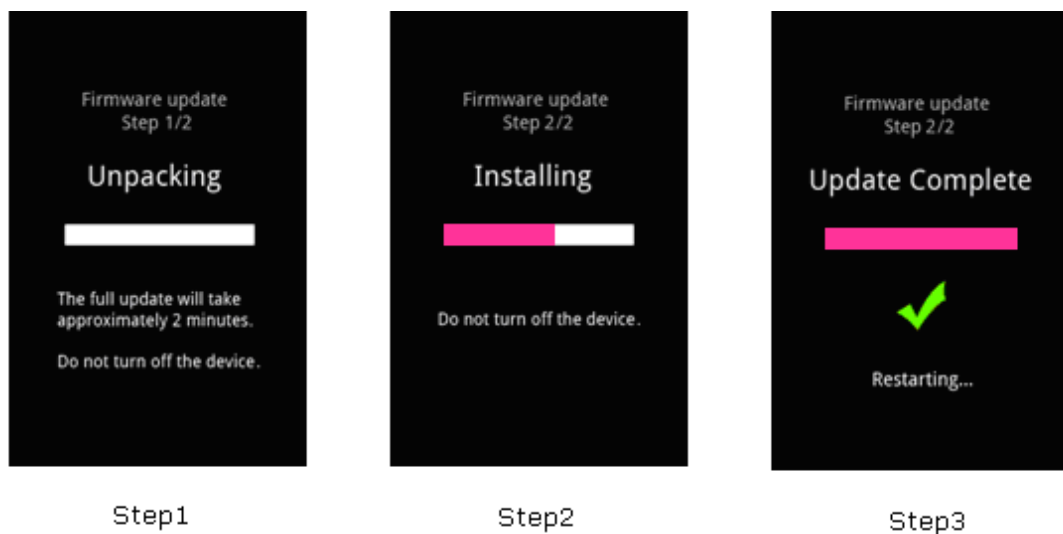


Step 6. When the progress bar stop, the phone will restart, if not , you need to remove the battery manually.

5 Upgrade validate

5.1 Check the version

 1. By System settings->About phone->Build number, to check the version. Just like

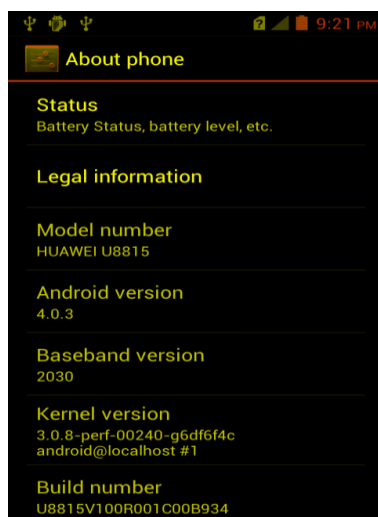

5.2 Basic function check

Switch on the handset, enter the idle screen, input a dial number and make a voice call, then long press the power key to power off the handset.



6 Notes

6.1 Notes 1

To make sure that the power of the battery is enough to run the upgrade process. Maybe you can connect the handset with the charger or the USB data cable to provide power.

6.2 Notes 2

Upgrade operations will erase the user data, so if there is something very important, recommend you to backup them.