


### 13. EXPLODED VIEW & REPLACEMENT PART LIST

### 13.1 EXPLODED VIEW(SBOM)

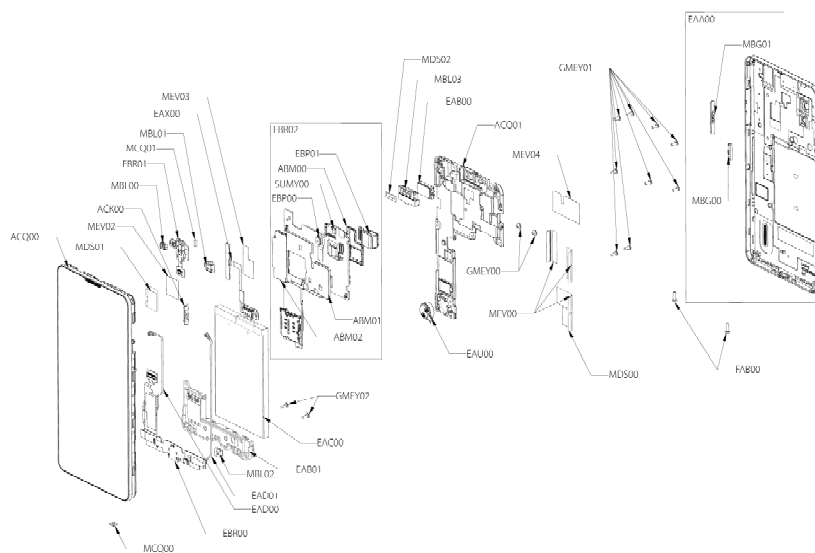

Location	Description
MBL03	Cap
EA800	Receiver
EAU00	Motor/JC
MD507	Gasket
ACQ01	Cover Assembly,Heart(SVL)
EAL00	Antenna Assembly
MBG00	Button
MBG01	Button,Side
EBF01	PCB Assembly,Flexible
FRB00	PCB Assembly,Flexible
EAX00	PCB,Flexible
EAJ01	Cable,Assembly
EAJ00	Cable,Assembly
EAL00	Rechargeable Battery,Lithium Polymer
FAF01	Speaker Module
ACX00	Contact Assembly
GMEV02	Screw,Machine
ACQ00	Cover Assembly,Front
MBL00	Cap
MBL01	Cap
MBL02	Cap
MCQ00	Damper
MCQ01	Damper
MD500	Gasket
MD501	Gasket
MEV02	Insulator
MEV03	Insulator
MEV00	Insulator
MFV04	Insulator
GMEV00	Screw,Machine
GMBY01	Screw,Machine
FAB00	Screw,Machine
EBR02	PCB Assembly,Main
ARM01	Can Assembly,Shield
ARM02	Can Assembly,Shield
ARM00	Can Assembly,Shield
EBP00	Camera Module
CDP01	Camera Module
SUMY00	Microphone,Condenser