

Android OS 4.4.2 KitKat ***Galaxy Note3***

<Appendix>

Customer Consultant Guide
Android mobile technology platform

Version 1.0
Global CS team
10th , Jan 2014

SAMSUNG

Revision History: This version replaces all previous versions



Date	Version	Comments
2014.1.10	V1.0	HQ CS team : Initial version

Spec: Notice


**Notice:**

All functionality, features, specifications and other product information provided in this document including, but not limited to, the benefits, design, pricing, components, performance, availability, and capabilities of the product are subject to change without notice or obligation. Samsung reserves the right to make changes to this document and the product described herein, at anytime, without obligation on Samsung to provide notification of such change.

Lock Screen



1. On Android OS 4.4.2 KitKat, Music Album art are displayed on Lock Screen while playing music album
2. Camera shortcut is displayed on lock screen

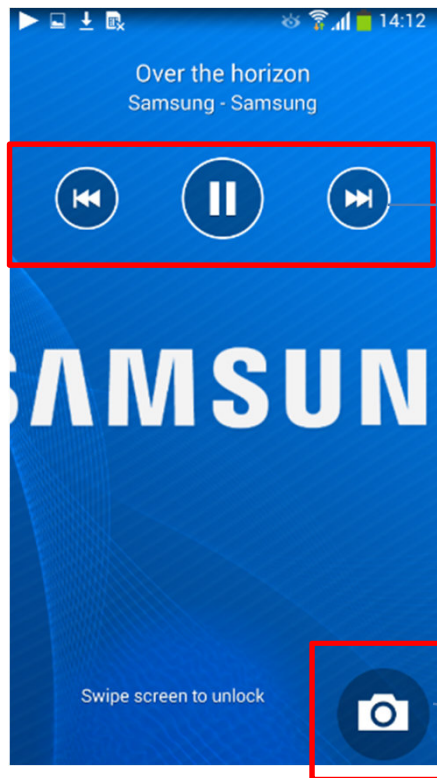

When playing the music, album art is displayed on background of Lock screen. You can control the playing music lists in Lock screen




It's available to use '**camera quick access**' by **Camera shortcut**.

* It may differ on country

Upgraded Emoji IME







Android OS 4.4.2 KitKat support more various upgraded Emoji icon.

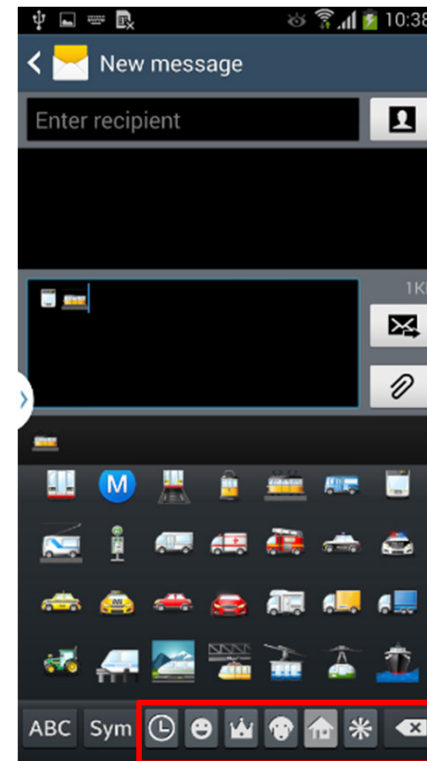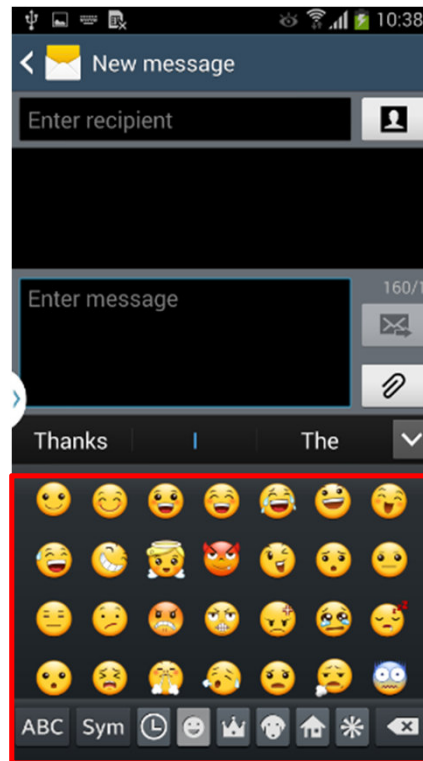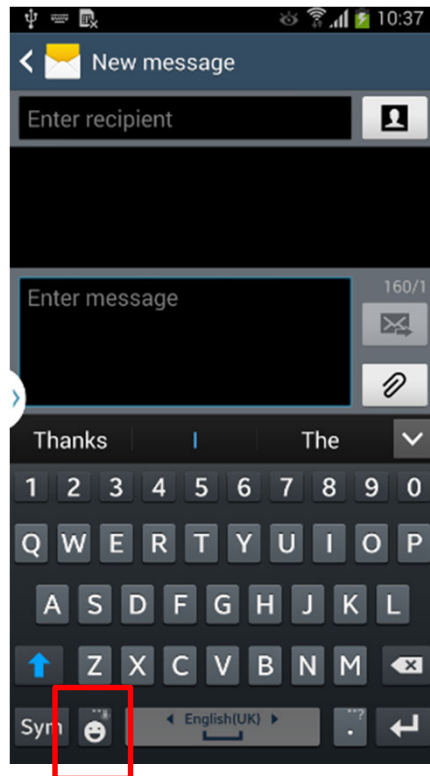

In IME, you can select the more various Emoji icons compared with Android OS 4.3

Choice of default messaging app (1)

You can select the default messaging app **between Messages and Hangouts** in Android OS 4.4.2 KitKat.

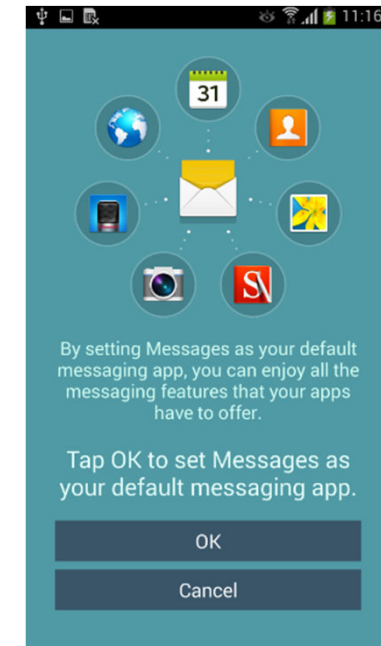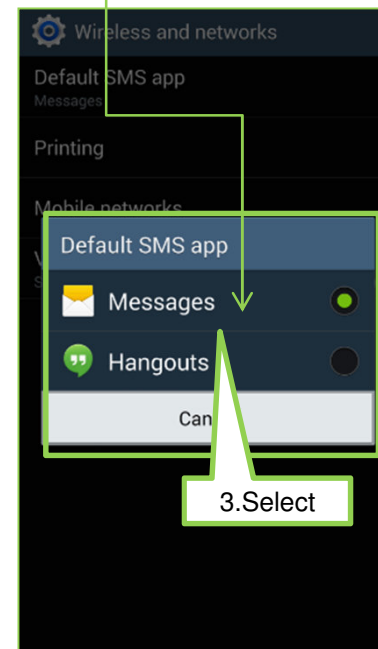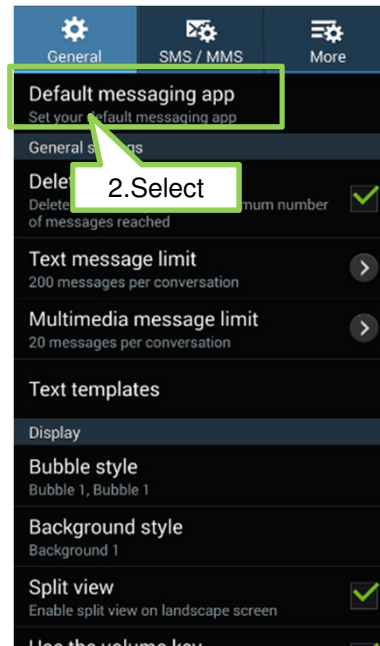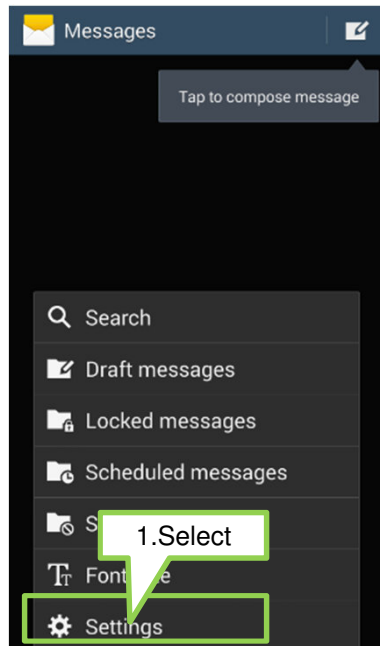

In Settings of Messages, select the Default messaging app menu.

Or, Select at **Apps > Settings > (General)**
Default applications > Message

Setting Hangouts as your default messaging app will prevent you from using some messaging features of Samsung applications.

After selecting the Hangouts, you can return again to Samsung Messages app

Choice of default messaging app (2) – How to send the SMS via Hangouts




1~2. In Google folder of Apps , Select the **Hangouts**


3~4. Select the contacts to send messages

5. Tap the **Send** icon after input the text

-> If you select the default messaging app as Messages again, you are able to check the messages outgoing by Hangouts .

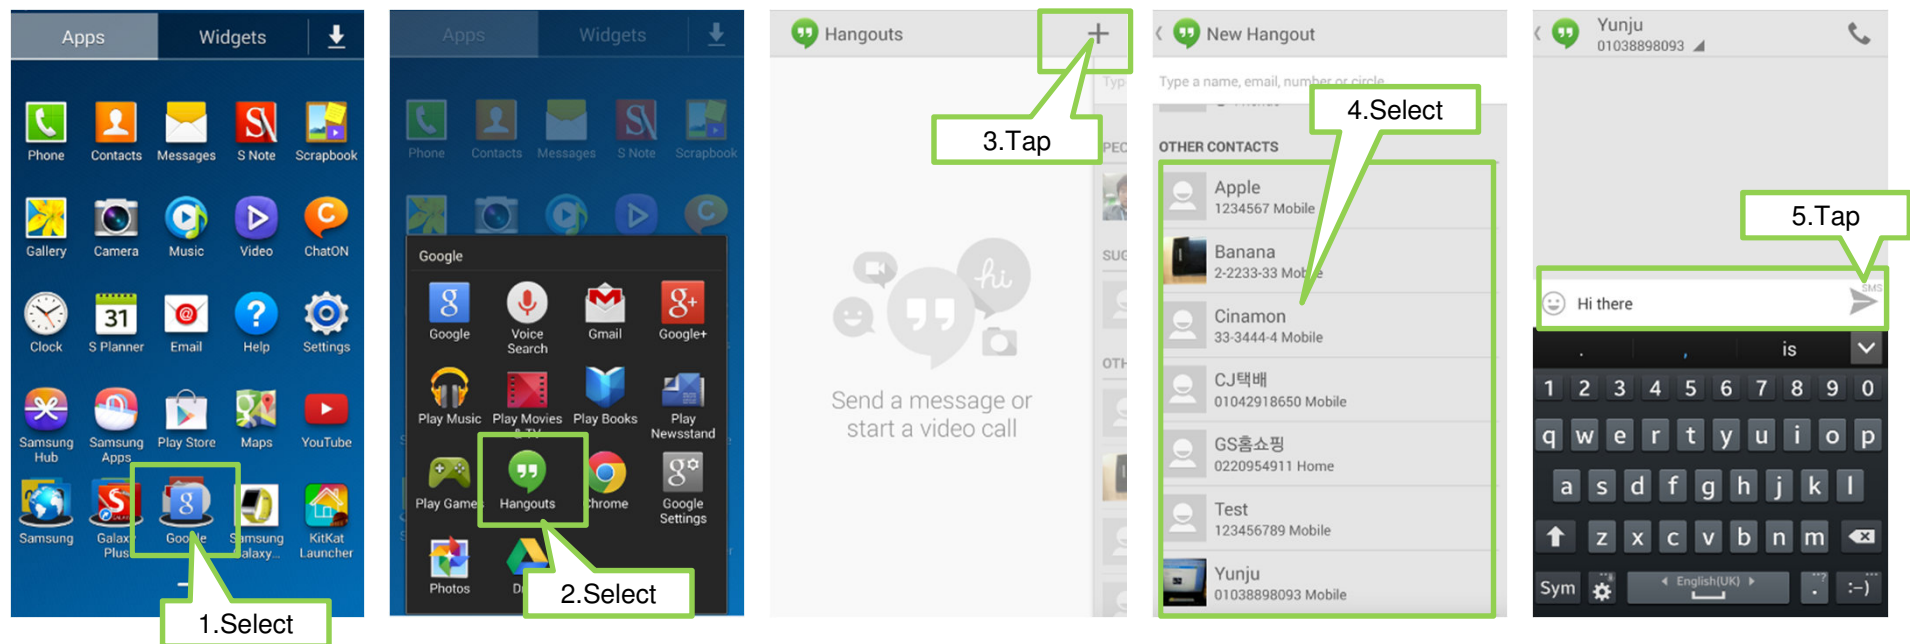


If you set the Messages as default messaging app,
you can check the messages by Hangouts

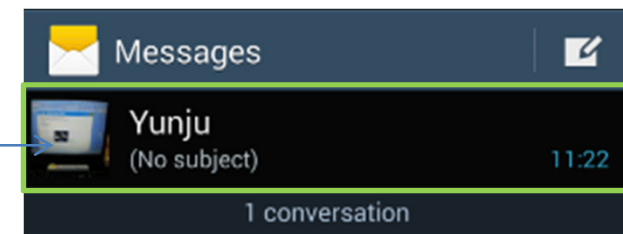

Selection of easy Home launcher (1)

You are available to select the Home launcher **among preloaded TouchWiz easy Home, TouchWiz basic Home, and Downloaded 3rd launcher** more easily at Android OS 4.4.2 KitKat.

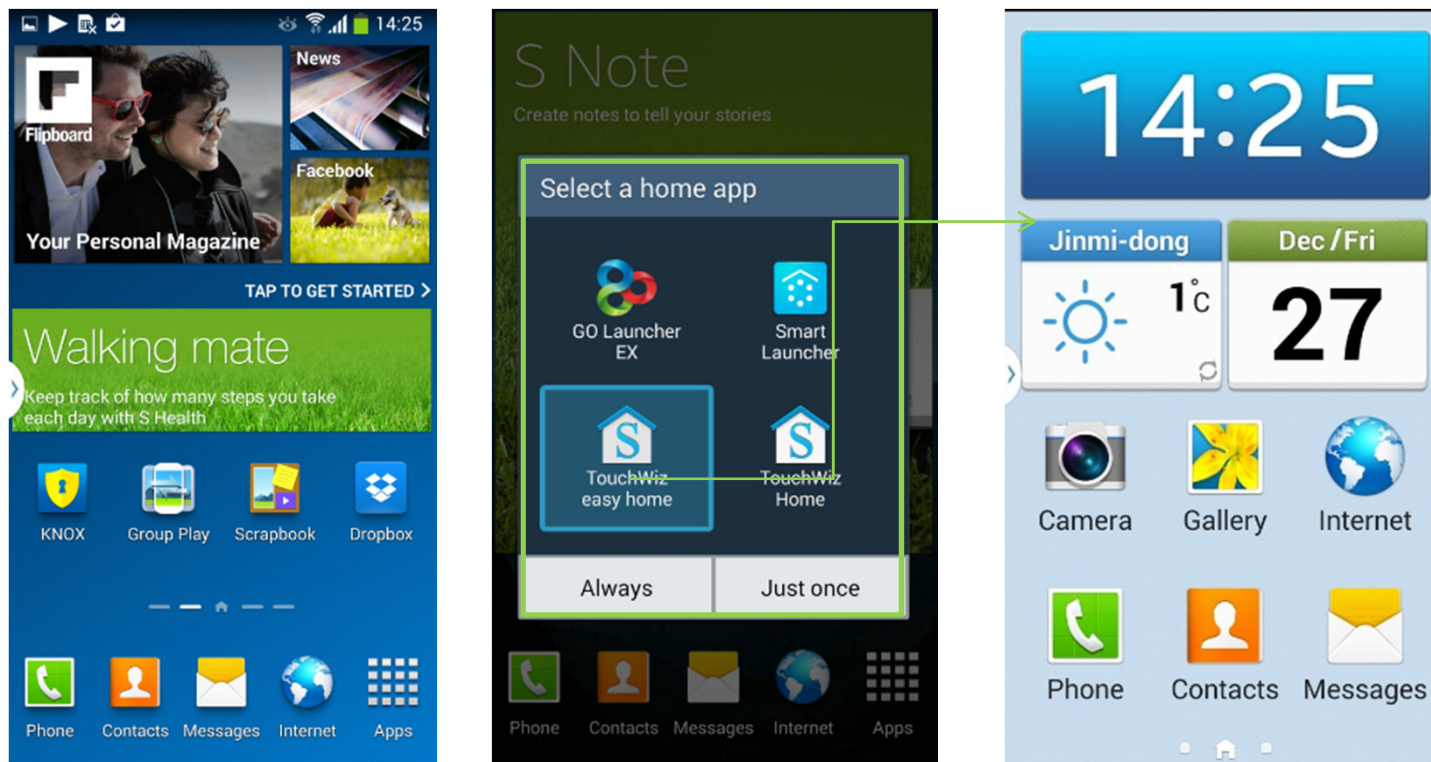

When returning to Home screen, you can select a Home app between preloaded or downloaded home app. Easy mode provides an easier experience for first time smart phone users with a simpler layout and bigger icons.


Selection of easy Home launcher (2)



Through **Default applications menu of Settings**, you can also set the default Home launcher.

1. In Settings, select the Default applications of General tab
2. Select the Home
3. Select the Home launcher between preloaded basic mode, easy mode and downloaded 3rd party mode
4. Launcher is reflected to Home screen.

You can directly delete the downloaded
3rd party launcher

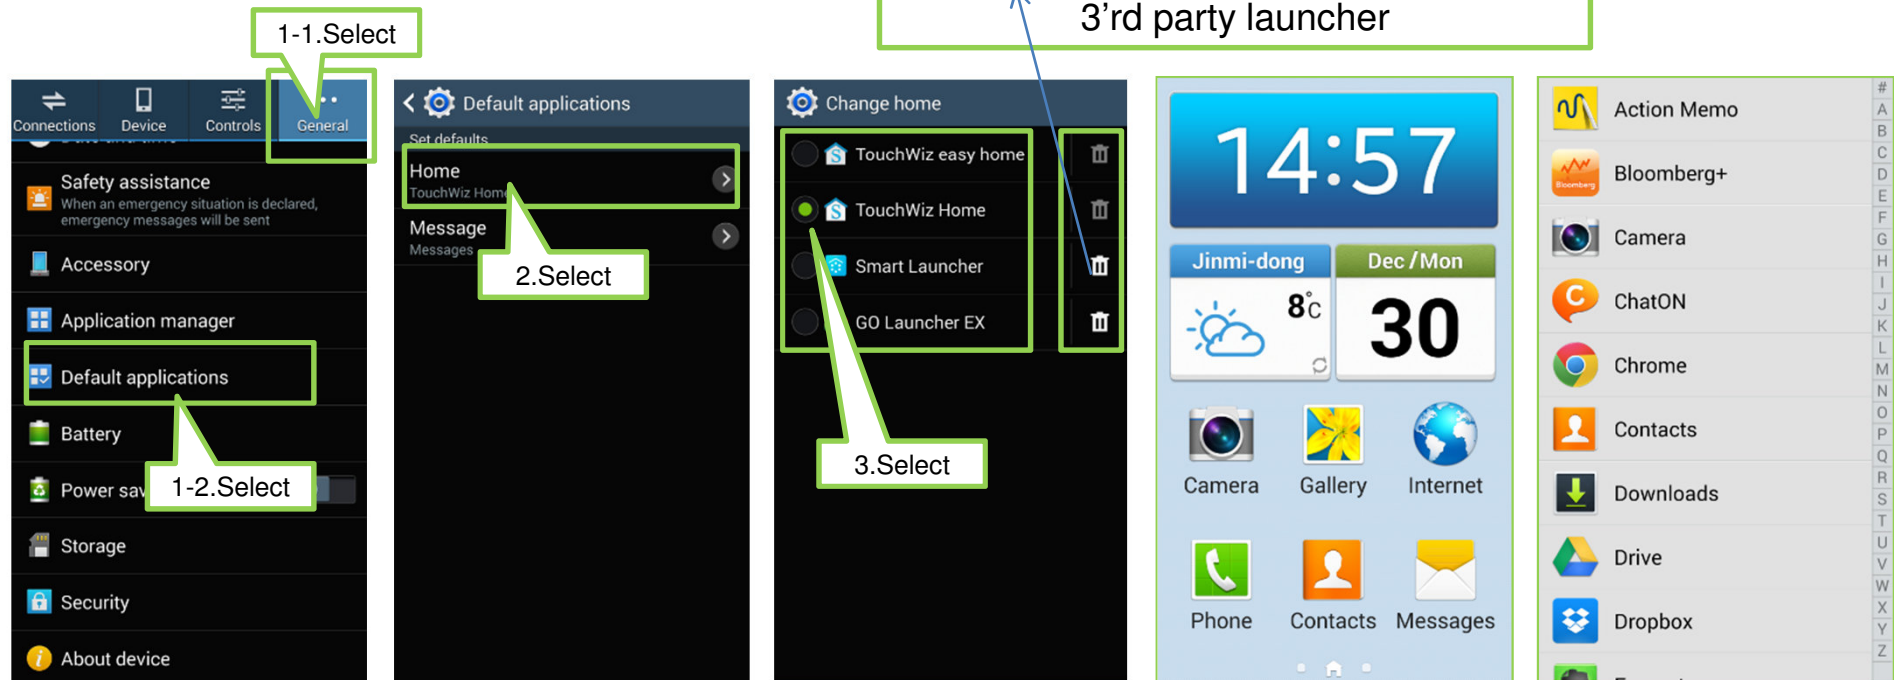

Now, Home screen is changed
according to your choice.

Integrated Location service (1)



At Android OS 4.4.2 KitKat. , location service are integrated and more detailed by new Location menu.





- In **Mode**, you can select the options(GPS, Wi-Fi, mobile networks) to estimate your location.
- Via **Recent location requests**, you can know the battery usage of apps which recently requests location service



Integrated Location service (2)

At Android OS 4.4.2 KitKat. , location service are integrated and more detailed by new Location menu.

- **Location services** lets Google uses your recent location data and history. Set the item to On / Off
 - > Google uses your device's most recent location data or history in connection with your Google account in like Google Now and Google Maps
- You can select the applications which will use location tag

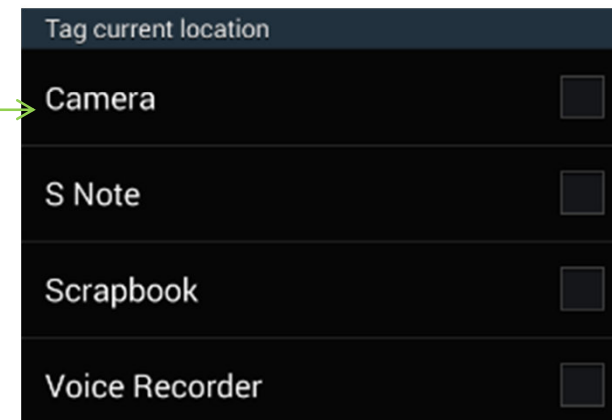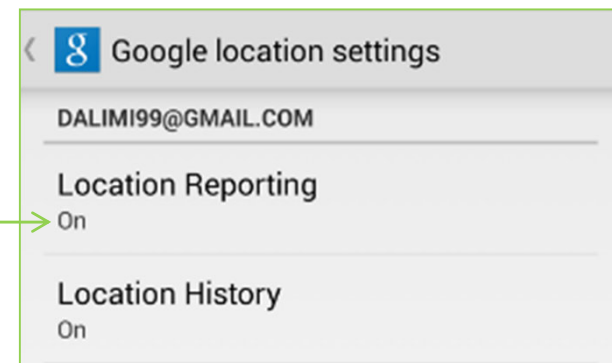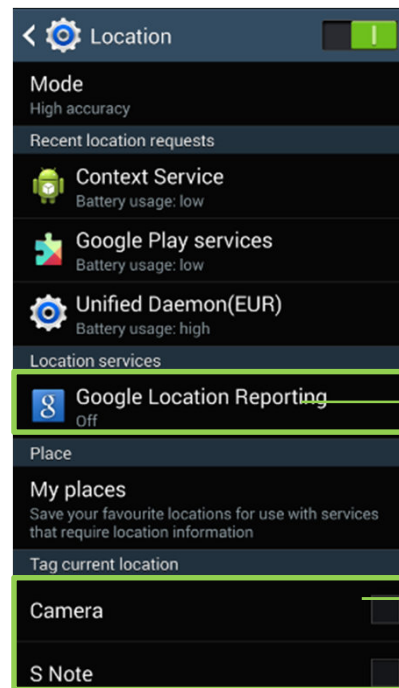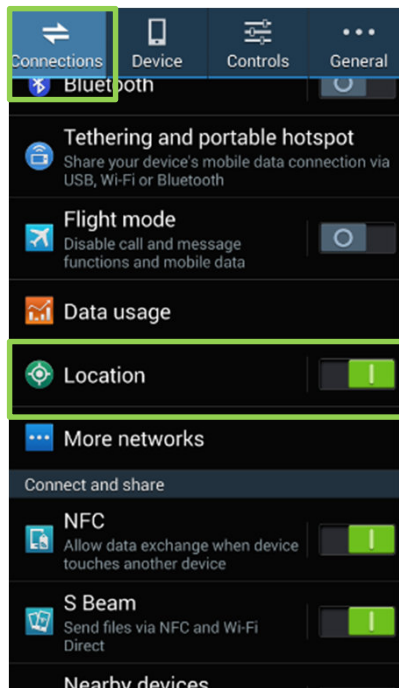


Wireless Printing service

Android OS 4.4.2 KitKat support **Wireless Printing service**.

1~2. Select the More networks, and tap the Printing




3~4. Choose the printer for service, and add printer for connection

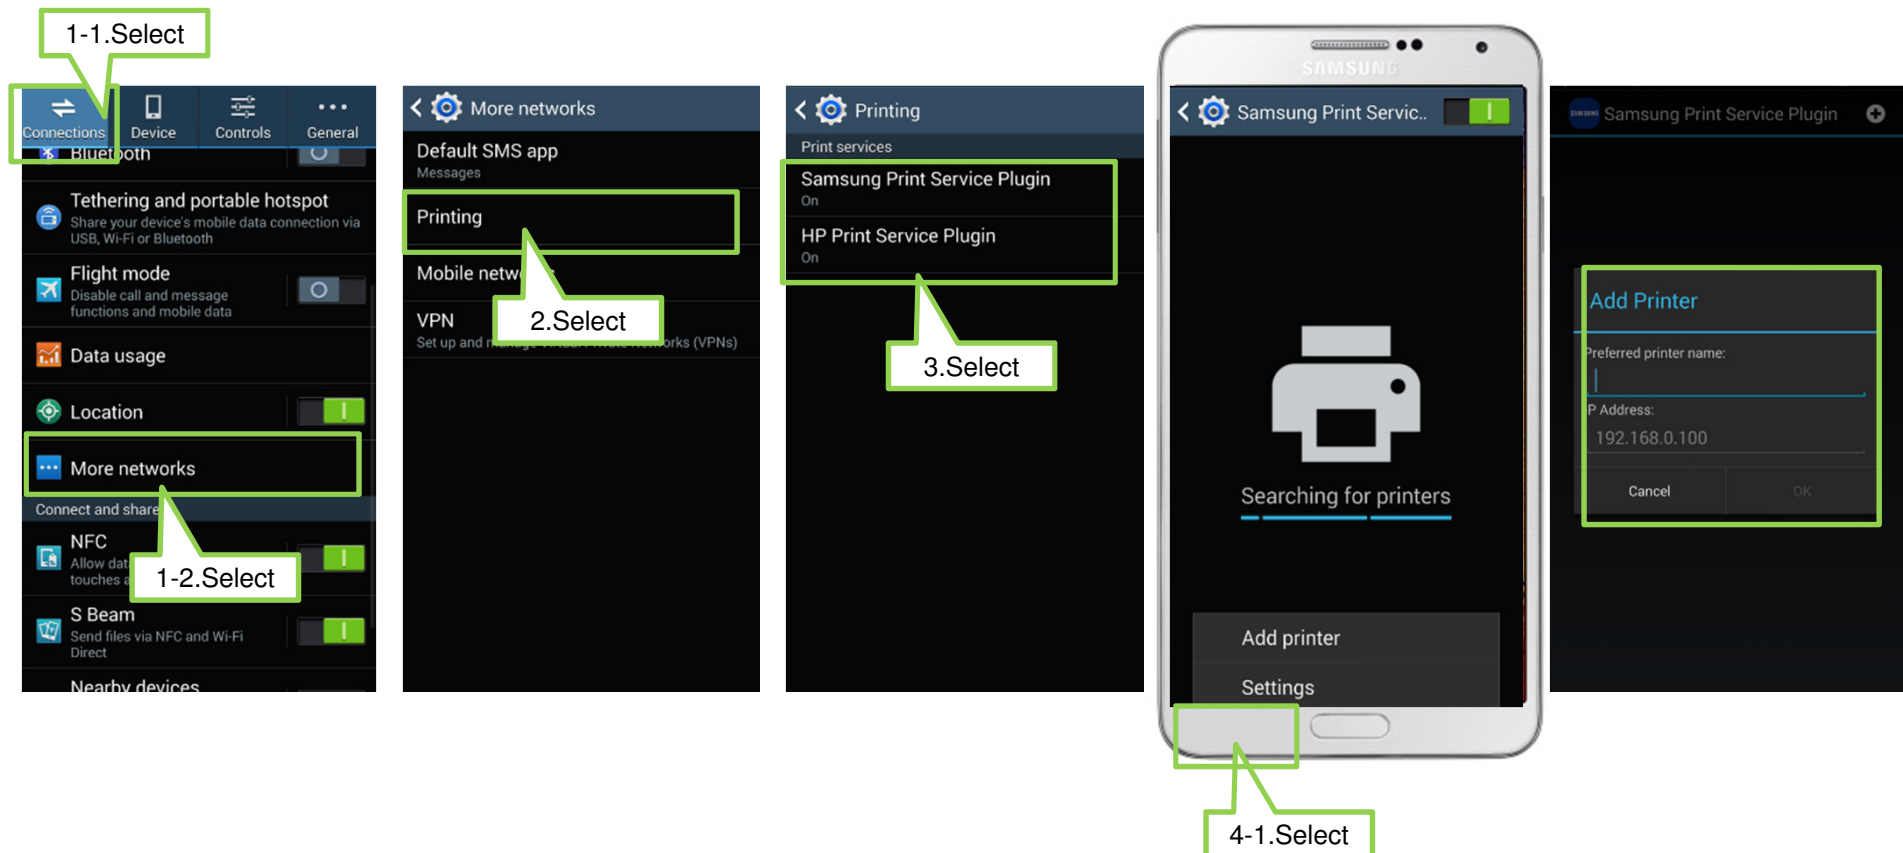

Upgraded GMS apps



Android OS 4.4.2 KitKat support the more **upgraded GMS apps like Photos, Drive.**

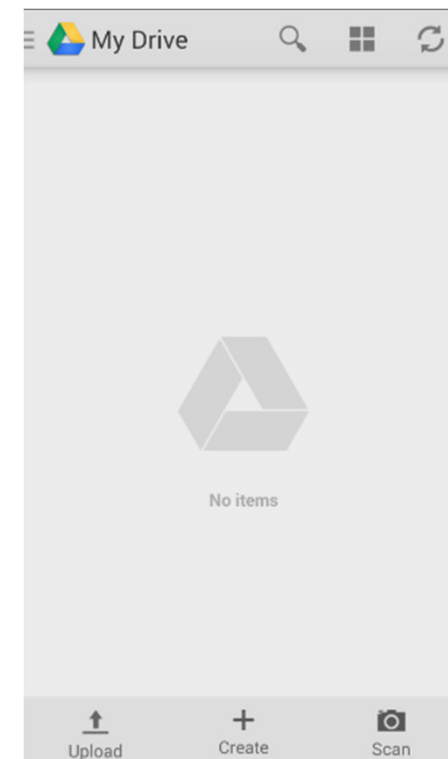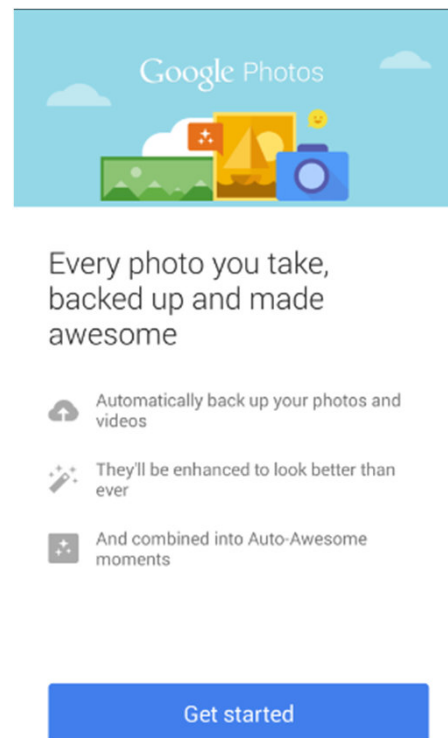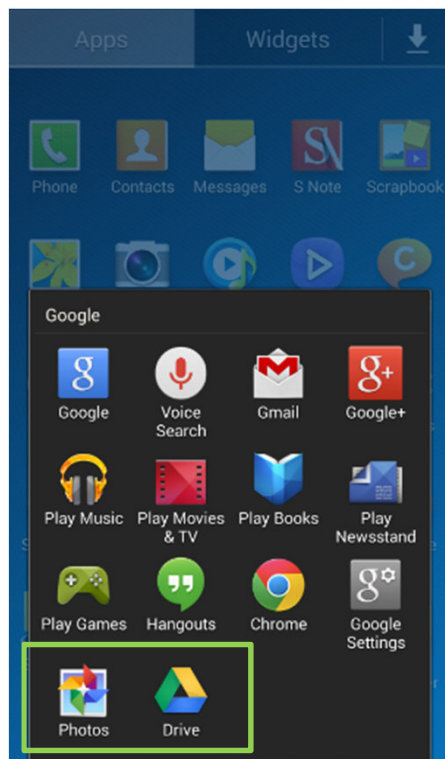

Google Drive : The Google Drive app lets you open, view, rename, and share your Google Docs and files.

Note that supported file formats depend on other apps installed on your device.

Google Photos : Back up your photos and Make them awesome. Automatically back up your photos and videos.

Need to upgrade the Gear Manager



Android OS 4.4.2 KitKat **require to upgrade the Gear Manager to the latest version 1.6**

If your Note3 device was upgraded to OS v4.4.2 KitKat , you should also need to upgrade the Gear Manager to the latest version 1.6. Connection between Galaxy Note3 based on KitKat and Galaxy Gear is optimized when connecting through the latest version(V1.6) Gear Manager.

Additionally, when upgrading Gear Manager to V1.6, you will be able to use the new Email application on your Galaxy Gear and Gear Manager. From V1.6, you are available to check and manage the Email on Galaxy Gear.

END

Customer Consultant Guide Android mobile technology platform

Language : English

The Samsung logo, consisting of the word "SAMSUNG" in white capital letters inside a blue oval.