

Upgrade procedure for the Parrot CK3000 Evolution



This document will help you in order to upgrade your Hands-free car kit via Bluetooth. Car kit upgrades are needed to improve the compatibility of your Parrot device, by allowing you to use more phones with your kit. It can also allow you to get new functionalities. You will find hereunder two different possibilities to upgrade your Parrot CK3000 Evolution via Bluetooth.

Software upgrade removes paired phones, synchronized contacts and voice tags.

- 1 Downloading the upgrade files 1
- 2 Upgrading the Parrot CK3000 Evolution by serial cable 3

1 Downloading the upgrade files


Before you begin:

Download and install the **Parrot Software Update Tool** program available on our web site www.parrot.com then choose SUPPORT and DOWNLOAD.


1. Start the **Parrot Software Update Tool** program.
► The following dialog box is displayed.




2. Click **Next**.
► The following dialog box is displayed.

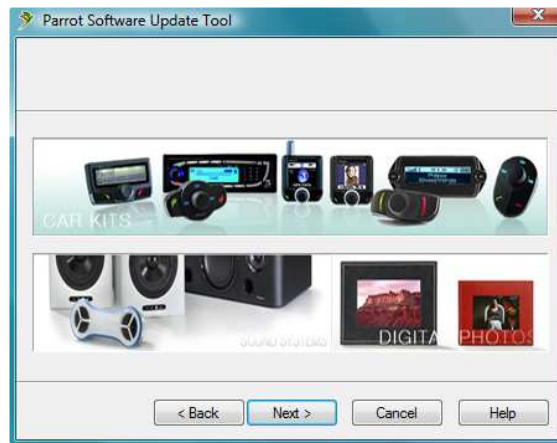

3. Select **Car kits** and click **Next**.
 ► The following dialog box is displayed.

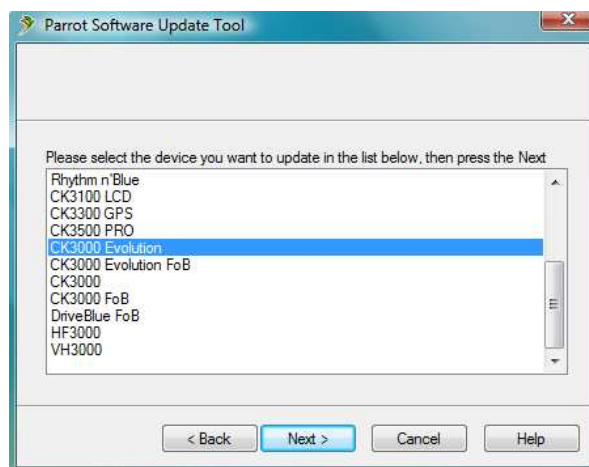

4. Select the Parrot CK3000 Evolution in the list and click **Next**.
 ► The following dialog box is displayed.

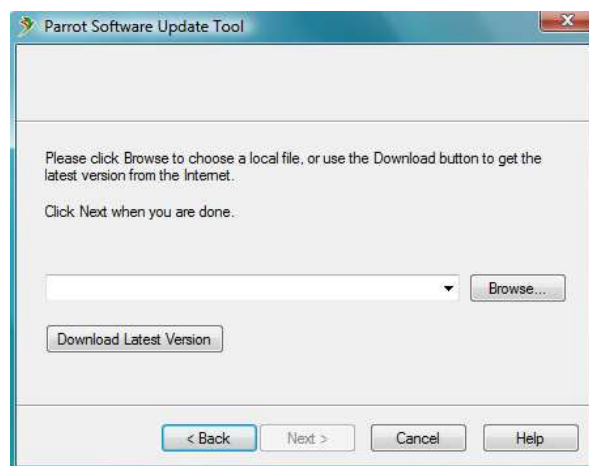

5. Click on **Download Latest version**.
 ► The Download Software Update dialog box is displayed.




6. Select your **language**.
7. Click on **Download Now** and wait until the end of the download.
 - The downloaded files will be stored in **C:\Program Files\ Parrot Software Update Tool\Internet Files**.

2 Upgrading the Parrot CK3000 Evolution by serial cable


Before you begin:

- Download the upgrade you wish to install.
- Connect your computer to your carkit via the serial cable.
- Keep the Parrot CK3000 Evolution off.


1. Start the **Parrot Software Update Tool** and click **Next**.
2. Choose the Parrot CK3000 Evolution and click **Next**.
3. Get the previously downloaded files by clicking on **Browse** and click **Next**.
4. Select **Serial connection** and click **Next**.

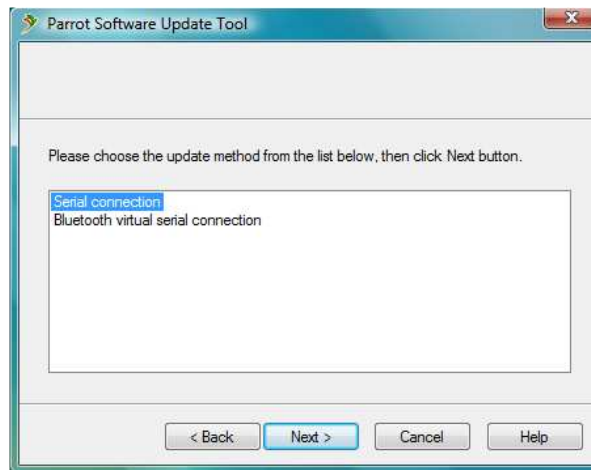


5. Select the COM port on which you have connected the serial cable and click **Next**.

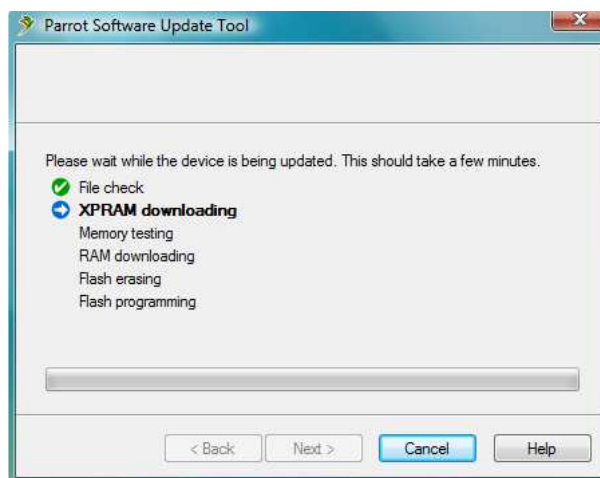

6. When the **Parrot Software Update Tool** reaches the “XPRAM downloading” step, plug in the car kit’s power supply.

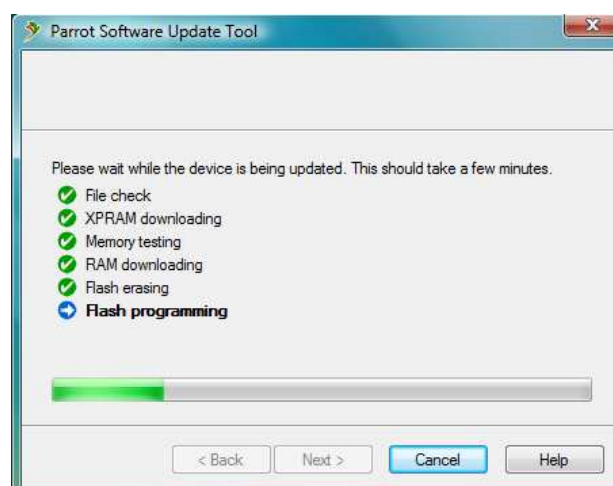

7. Wait until the end of the upgrade process and click on **Finish**.
 - You can now disconnect your car kit from the computer.
 - Your Parrot CK3000 Evolution is now up-to-date.

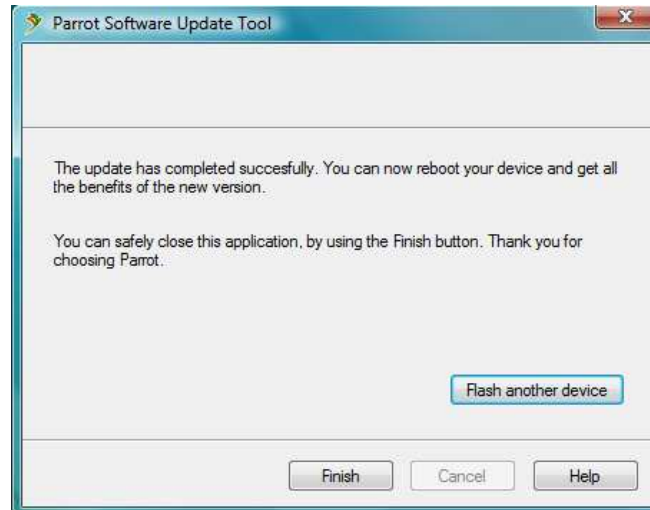

	<p>Wait for the automatic reboot of the kit. Do not stop the power source! This operation can take few minutes.</p>
--	--

Contact your dealer: he is always available to help you