

Show pagesource


Old revisions


Recent changes

Search


Trace: » windows\_hboot\_driver\_install

## Windows HBOOT driver installation instructions


- Download the  unrEVOked modified USB driver and expand it somewhere you will remember.
- Turn off your phone, then boot it into the HBOOT menu by holding **power** and **volume down**.
  - On EVO 4G, you will have to select HBOOT USB at that menu by pressing **volume down** four times, then **power**. Wait until the screen flashes through an "SD Checking" message before pressing buttons; otherwise, the phone will ignore keypresses.
- Connect the phone to your Windows machine with a USB cable and wait for the phone to say HBOOT USB PLUG on screen.
- Open Device Manager.
  - Click *Start*, then right click on *Computer*, then click *Properties*, then click *Device Manager*.
- Under *Other devices*, you should now see the *Android 1.0* device, similar to the picture below.

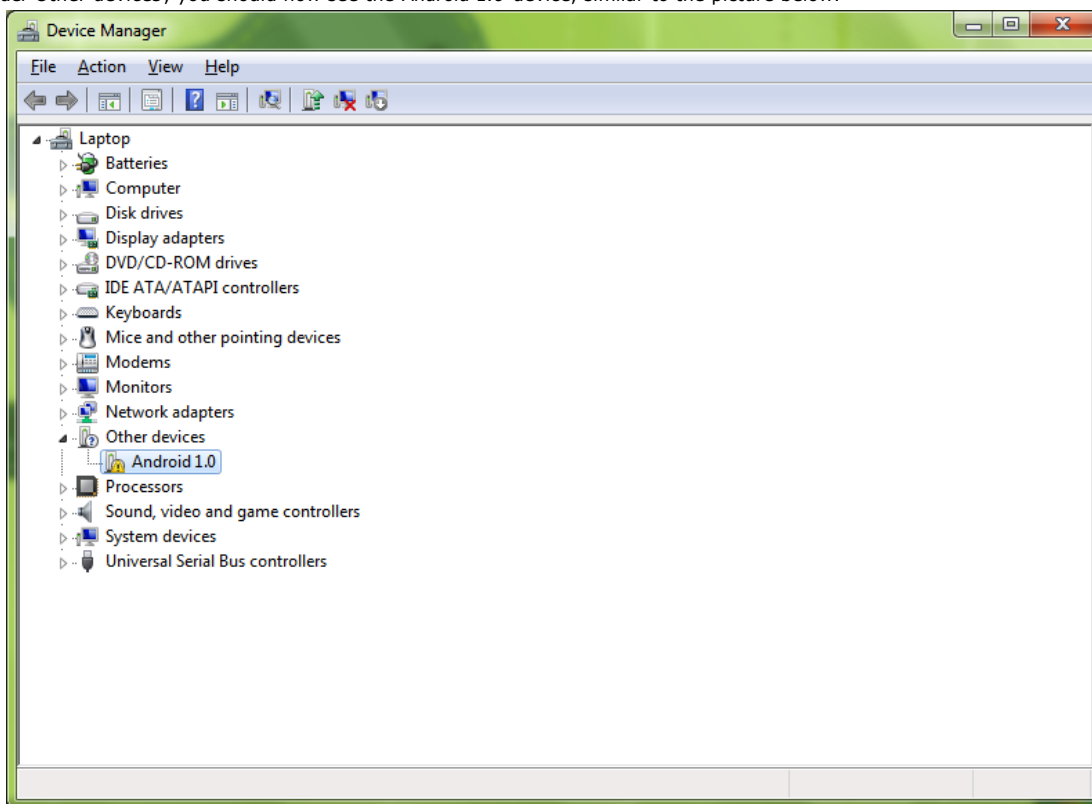


- Right click on *Android 1.0* and click *Update Driver Software*. You should then be at the following screen:

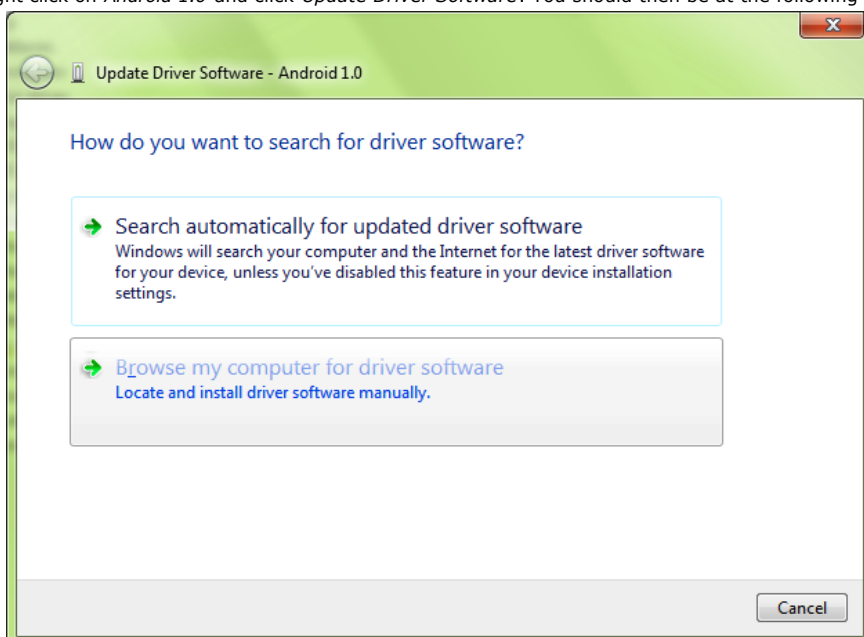


- Click on *Browse my computer for driver software*.

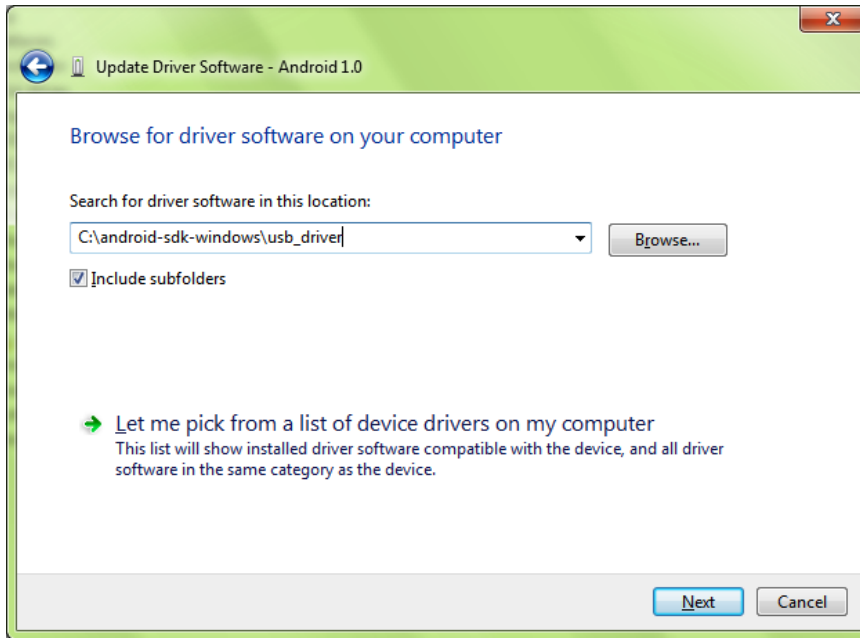

- Click on *Browse* and select the *Android USB Driver* folder on on your computer, click ok, then click next.
- You should get a status bar indicating that the driver is installing. If you get any warnings, just click *Ok*.
- Your driver should install and your screen will look like below.

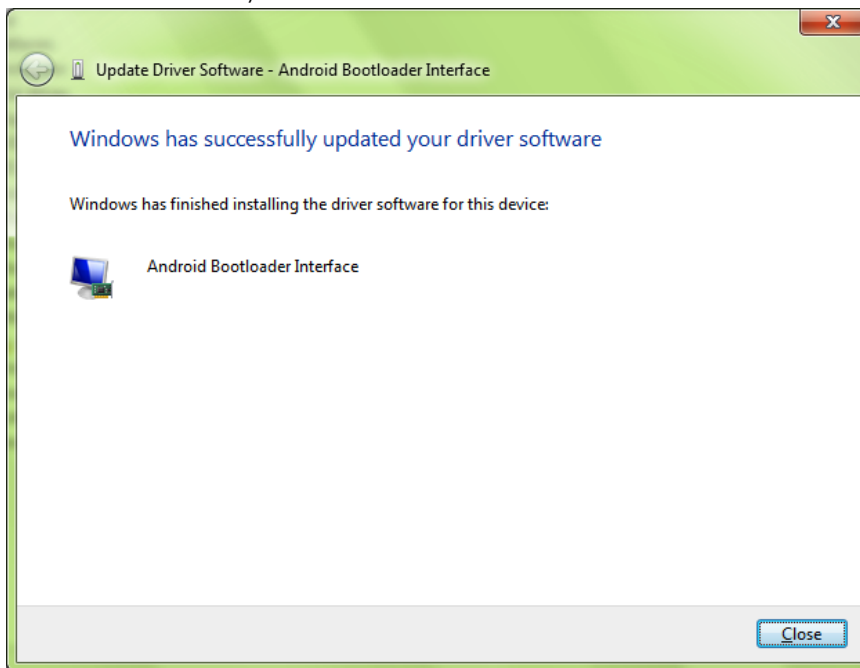

- Click *Close* and make sure *Android Bootloader Interface* is listed under *Android Phone*.

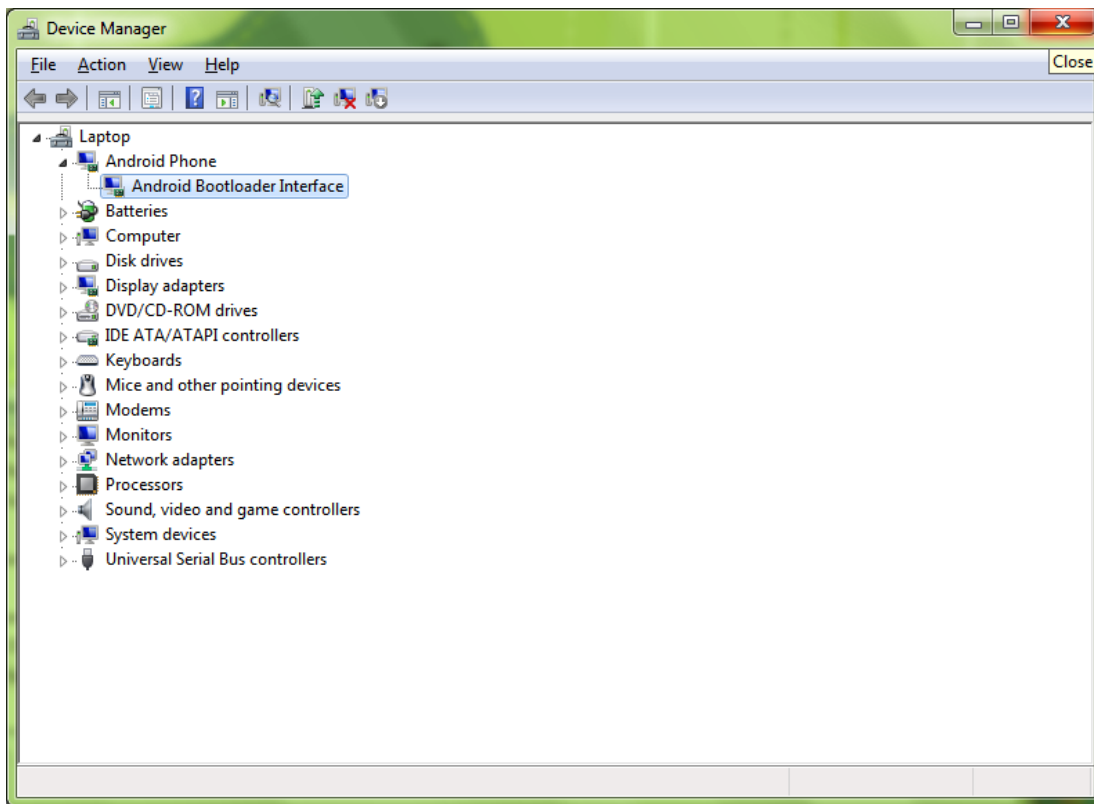

Thank you brucekey for the screen captures.

public/windows\_hboot\_driver\_install.txt · Last modified: 2010/06/19 22:59 by ejhart

Show pagesource

Old revisions

Login

Sitemap

Back to top

RSS XML FEED

DONATE

PHP POWERED

W3C XHTML 1.0

W3C CSS

DOKUWIKI